

CombiSteel
Explosion diagram parts list of fresh milk mixer
7062.0200

No.	Name	QTY.
1	Top head trademark	1
2	Top head	1
3	Locking handle ball	1
4	Upper protective cover	1
5	Back cover	1
6	Flat washer	3
7	Cross recessed pan head screws	3
8	Decorative strip	1
9	Crossbar	1
10	Cross recessed pan head screws	4
11	Hexagonal socket head cap screw	4
12	Spring washer	4
13	Flat washer	4
14	Countersunk decorative cover	2
15	Pin shaft	1
16	Base	1
17	Locking screw	1
18	Speed control knob	1
19	Switch	1
20	Material bucket cushion	1
21	Cross recessed pan head screws	2
22	PCB protective cover	1
23	circuit board	1
24	Floor	1
25	Rubber feet	4
26	Hexagonal socket head cap screw	4
27	Oil collecting ring	1
28	Protective cover	1
29	Bowl	1

CombiSteel
Explosion diagram parts list of fresh milk mixer
7062.0200

30	Hexagon thin nut	1
31	Spring washer	1
No.	Name	QTY.
32	Small spiral bevel gear	1
33	Motor	1
34	Gear box cover	1
35	Large spiral bevel gear	1
36	Flat key	2

CombiSteel
Explosion diagram parts list of fresh milk mixer
7062.0200

No.	Name	QTY.
37	Middle shaft	1
38	Bearing	2
39	Middle shaft sleeve	1
40	gear box	1
41	Hexagonal socket head cap screw	3
42	Spring washer	3
43	Flat washer	3
44	Hexagon headed bolt	4
45	Spring washer	4
46	Flat washer	4
47	Inner gear	1
48	Adjusting the retaining ring	1
49	Cross recessed countersunk head screw	1
50	External retaining ring	2
51	Planetary gear	1
52	Bearing	2
53	Planetary shaft sleeve	1
54	eccentric wheel	1
55	Spring retainer	2
56	Spring washer	1
57	Flat key	2
58	Planetary shaft	1
59	BALL	1
60	Locking plate	2
61	hex nut	2
62	Spring washer	5
63	Flat washer	2
64	Microswitch holder	1
65	Cross recessed countersunk head screw	2

CombiSteel
Explosion diagram parts list of fresh milk mixer
7062.0200

66	hex nut	2
67	Flat washer	2
No.	Name	QTY.
68	Microswitch	1
69	Cross recessed pan head screws	2